



INSTALLATION UPDATE

RRP SUPER LITE HANDLEPOLE, RRP BILLET HANDLEPOLE AND RRP CAST HANDLEPOLE

RRP handlepoles require anti-seize or waterproof grease to be applied to the RRP hardware provided before assembly and installation of the RRP Handlepole.

Failure to do this could possibly cause the hardware to seize and/or break.

Each handlepole has 6 tube clamp bolts (lite and billet poles) and 6 bolts with nuts (cast pole).

Please refer to the instruction sheet enclosed for the proper assembly and torque settings for the RRP Handlepole.



INSTALLATION UPDATE

RRP SUPER LITE HANDLEPOLE, RRP BILLET HANDLEPOLE AND RRP CAST HANDLEPOLE

RRP handlepoles require anti-seize or waterproof grease to be applied to the RRP hardware provided before assembly and installation of the RRP Handlepole.

Failure to do this could possibly cause the hardware to seize and/or break.

Each handlepole has 6 tube clamp bolts (lite and billet poles) and 6 bolts with nuts (cast pole).

Please refer to the instruction sheet enclosed for the proper assembly and torque settings for the RRP Handlepole.

